


Bearings are magnetic		TWR
Distances in metres		119.050
Elevation in ft AMSL		GND
Coordinates WGS 84		121.625
APRON		
lighting	bearing strength	
Edge: Blue	Surface:	
	CONCRETE – m² 226.300	
	PCN 119 R/A/X/T	
	BITUMEN – mq 76.500	
PCN 47 F/A/X/T		
REMARK:		
1) Area 313 available only for Helicopter		
2) APRON TAXIWAY ROMEO ICAO CODE 'E'		

AD ELEV 65		PALERMO / PUNTA RAISI									
APRON ELEV 47		L I C J			38°10'55" N 013°05'58" E						
POINTS ON PARKING AREA											
STANDS		N		E		STANDS		N		E	
101	38°10'55.97"	013°05'56.69"	207	38°11'06.3"	013°06'16.4"	301	38°11'07.54"	13°06'31.30"			
102	38°10'55.51"	013°05'56.84"	208	38°11'07.1"	013°06'17.1"	302	38°11'09.11"	13°06'30.45"			
103	38°10'57.54"	013°05'55.84"	209	38°11'07.1"	013°06'17.5"	303	38°11'10.58"	13°06'29.66"			
104	38°10'57.32"	013°06'00.69"	210	38°11'07.5"	013°06'19.7"	304	38°11'12.58"	13°06'35.62"			
105	38°10'58.88"	013°05'59.85"	211	38°11'08.3"	013°06'21.5"	305	38°11'11.12"	13°06'36.42"			
106	38°11'00.68"	013°06'05.20"	212	38°11'08.9"	013°06'23.5"	306	38°11'09.55"	13°06'37.27"			
107	38°10'59.11"	013°06'06.04"	213	38°11'09.2"	013°06'25.2"	307	38°11'11.57"	13°06'43.57"			
108	38°10'59.54"	013°06'07.32"	214	38°11'10.1"	013°06'25.7"	308	38°11'12.23"	13°06'43.70"			
109	38°11'01.11"	013°06'06.48"	215	38°11'10.1"	013°06'26.0"	309	38°11'12.78"	13°06'42.92"			
110	38°11'05.31"	013°06'13.81"	216	38°11'01.35"	013°06'21.69"	310	38°11'13.99"	13°06'42.26"			
111	38°11'03.72"	013°06'14.33"	217	38°11'01.97"	013°06'23.26"	311	38°11'14.62"	13°06'42.41"			
112	38°11'02.73"	013°06'15.22"	218	STOP1 38°11'01.99"	013°06'23.44"	312	38°11'15.18"	13°06'41.62"			
113	38°11'02.06"	013°06'14.86"		STOP2 38°11'02.11"	013°06'23.08"	313	38°11'09.59"	13°06'45.92"			
			219	38°11'02.48"	013°06'25.00"						
			220	38°11'03.02"	013°06'26.71"						
			221	STOP1 38°11'03.25"	013°06'27.19"						
				STOP2 38°11'03.36"	013°06'26.82"						

CHANGE: Coordinates stands 301-313, denomination new lighting tower 'L17'

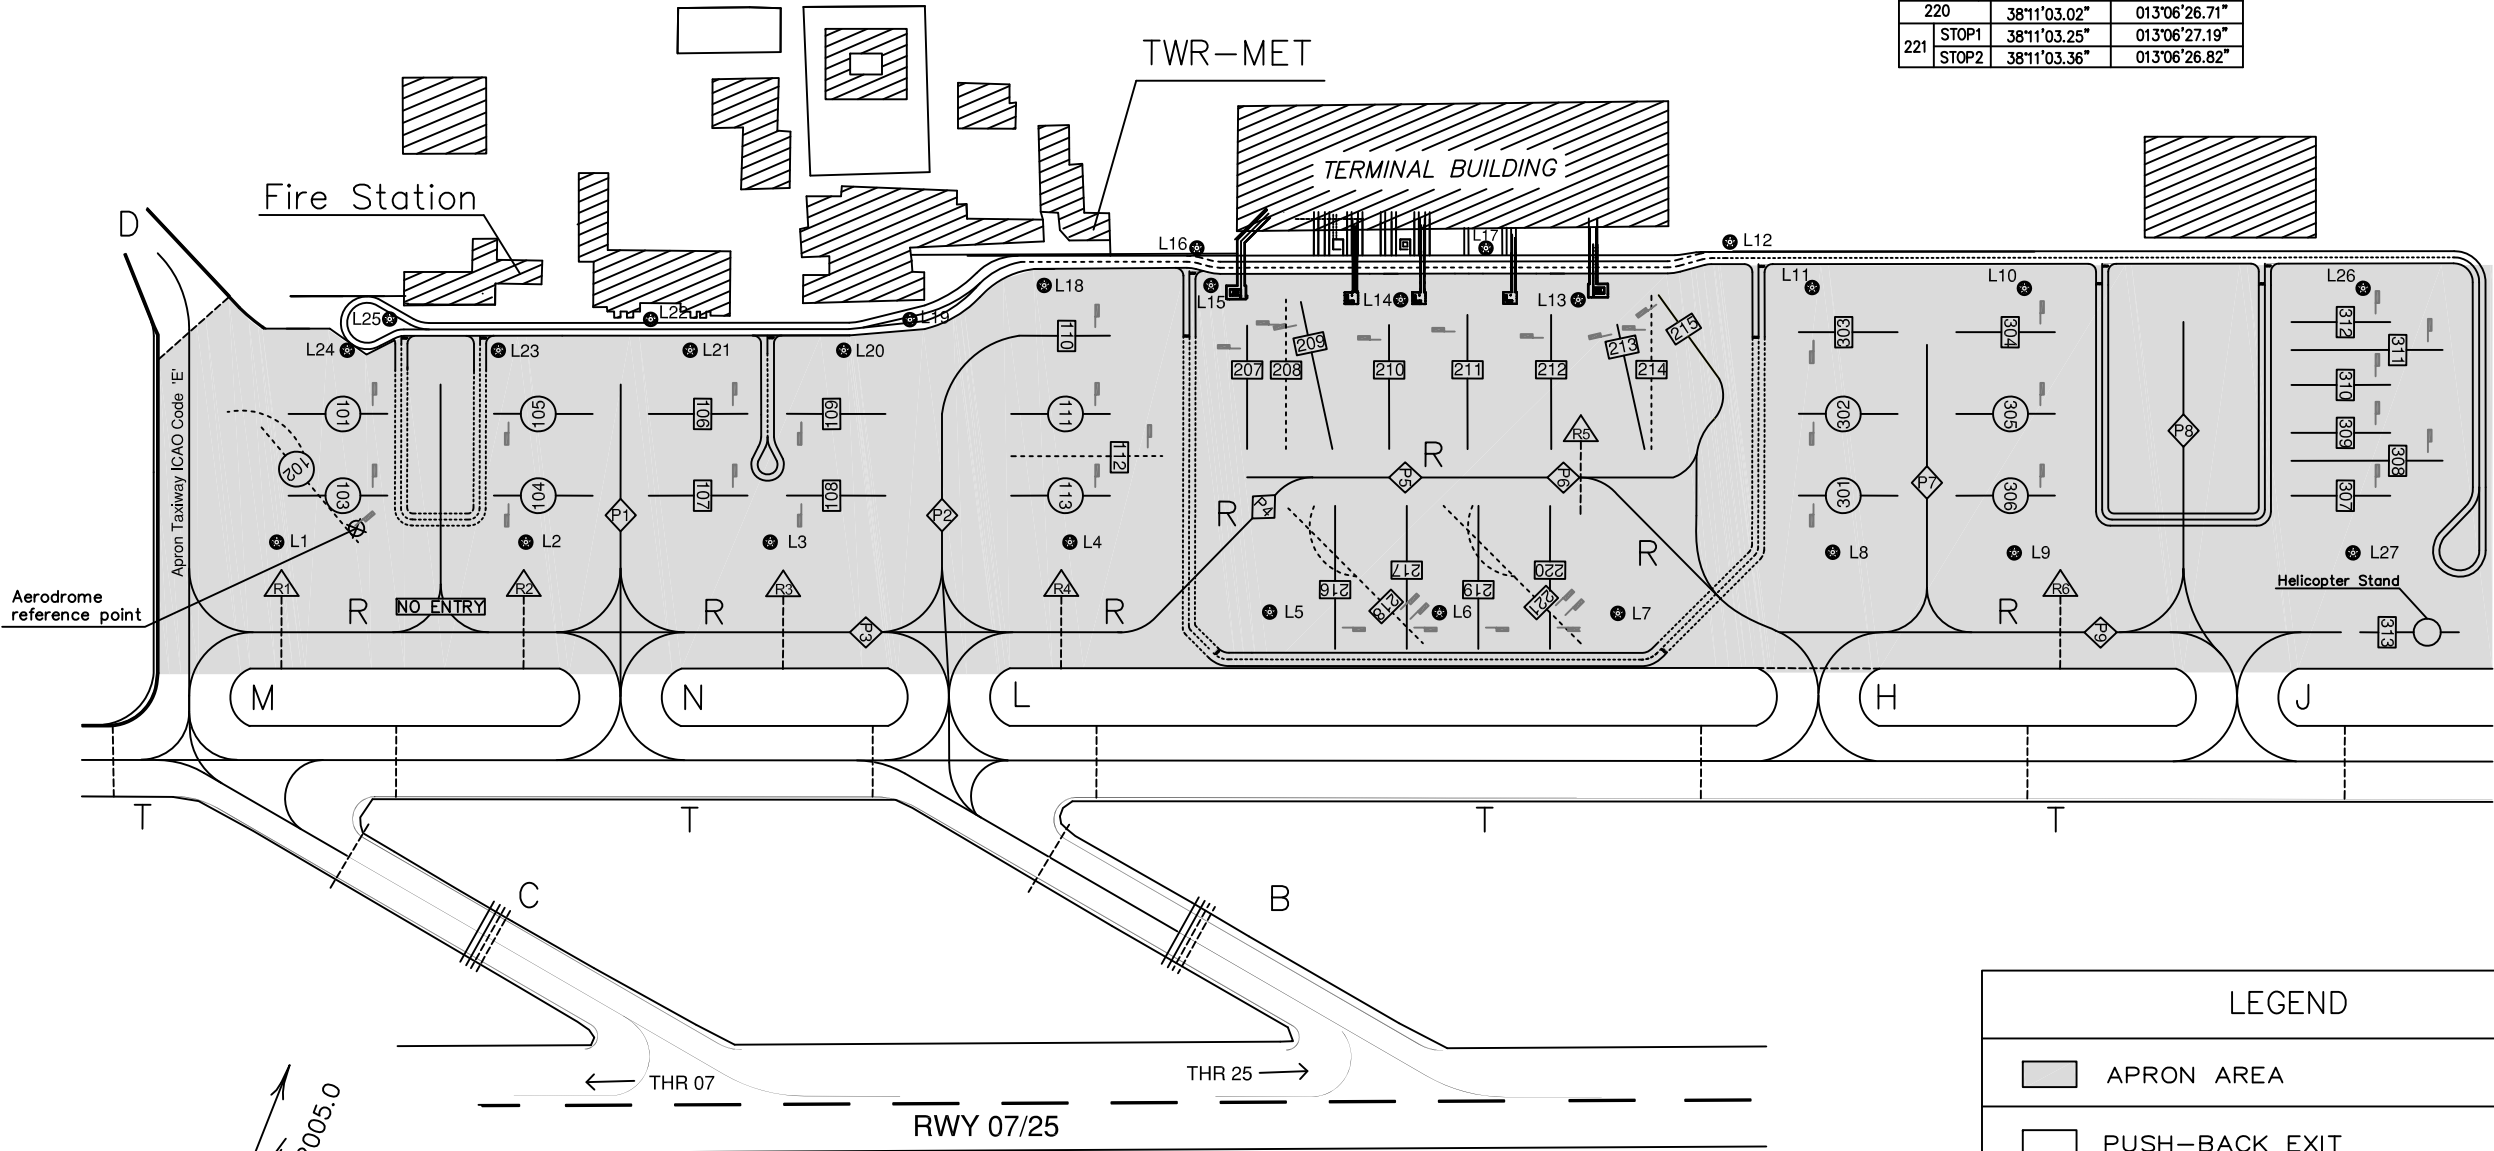

LEGEND	
	APRON AREA
	PUSH-BACK EXIT
	SELF-MANOEUVRING EXIT
	INTERMEDIATE HOLDING POSITIONS
	START ENGINE POINT
	LIGHTING TOWER