


RWY 27

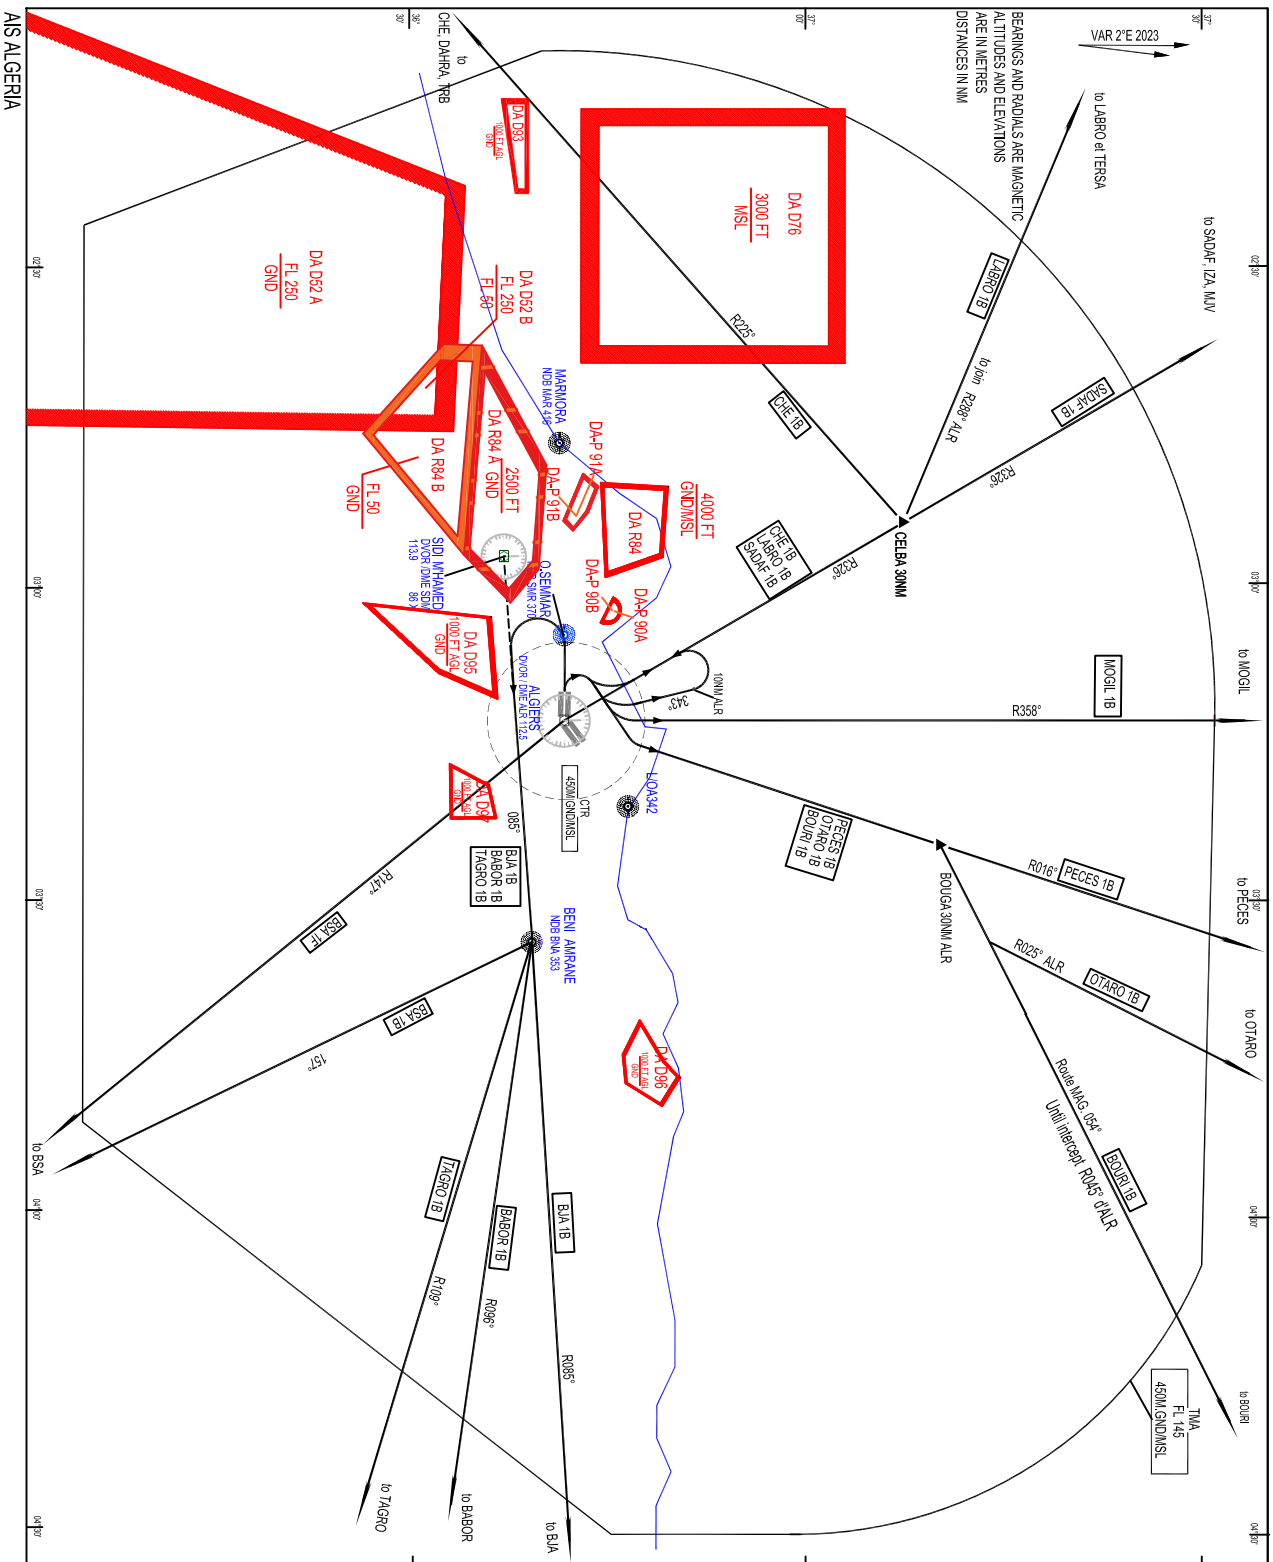

ALGERS TMA		
DEPARTURES PROCEDURES - ALGERS HOUARI BOUMEDIENE		
RWY 27		
CODE	EXIT POINT	PATHS
MOGL 18		After Take-off, reach 1500ft than turn right, intercept and follow R358° ALR to MOGL than M.V.
PECES 18		After Take-off, reach 1500ft than turn right, intercept and follow R016° ALR to PECES than M.N.
OTAO 18		After Take-off, reach 1500ft than turn right, intercept and follow R016° ALR, at BOUGA (30NM ALR) Turn right to join R205° ALR to O.TAO
BOUR 18		After Take-off, reach 1500ft than turn right, intercept and follow R016° ALR, at BOUGA (30NM ALR) Turn right to join R045° ALR to BOUR
BA 18		After Take-off, maintain R/VY axis to pass SMR, then turn left, intercept and follow R085° SDM to BNA, pass BNA FL70 minimum, then route to BA.
BAGOR 18		After Take-off, maintain R/VY axis to pass SMR, then turn left, intercept and follow R085° SDM to BAGOR, pass BNA FL70 minimum, then route to BAGOR.
TAGRO 18		After Take-off, maintain R/VY axis to pass SMR, then turn left, intercept and follow R085° SDM to BNA, pass BNA FL70 minimum, then route to TAGRO.
BSA 18		After Take-off, maintain R/VY axis to pass SMR, then turn left, intercept and follow R085° SDM to BNA, pass BNA FL70 minimum, then route to BSA.
BSA 1F		After Take-off, reach 1500ft than turn right, intercept and follow R345° ALR, at 10NM turn left to return to R326° to ALR, pass ALR FL70 minimum then intercept R147° ALR to BSA.
CIE 18		After Take-off, reach 1500ft than turn right, intercept and follow R326° ALR, at CELBA (30NM ALR) turn left on CIE to DAHRA or TSB
LABRO 18		After Take-off, reach 1500ft than turn right, intercept and follow R326° ALR, at CELBA (30NM ALR) turn left to join R288° ALR to TESSA then LABRO.
SDUAF 18		After Take-off, reach 1500ft than turn right, intercept and follow R326° ALR, then route to SDUAF then ZL to M.V.